

# ROYAL CLUB



Display mode : XVGA  
RL003

**BORDEN**  
TECHNOLOGY CORPORATION



## INTRODUCTION

TABLE CHIPS	02
WINBET	02
BETTING AREAS	02
SPIN	07
BET TIMER	07
UNDO / REDO / CLEAN / REPEAT / DOUBLE	07

## SYSTEM SET UP

MESSAGE REMOVAL	08
TEST / SET UP	08
FUNCTIONAL TESTING OF TOUCH-SCREEN PANEL	12
STATISTICS	13

## WIRING DIAGRAM

WIRING DIAGRAM	15
CONTROL PANEL	16
PCB CONNECTOR PIN DIAGRAM	17
CC-TALK CONNECTOR PIN DIAGRAM	18




## INTRODUCTION

### 1.TABLE CHIPS

Players can deal with the different denominations of table chips for betting.



### 2.WINBET

Players can place the last time winning credits as a winbet  on the outside bets area.

### 3.BETTING AREAS

Three betting categories – inside bets, outside bets, combination bets.



## combination bets

**\*Combinación de Apuestas:** Presionar [CALL BETS] y aparece la área de apuestas combinación. Hay cinco combinaciones de apuesta.

**1.Voissins du Zero**  
(Vecino de Cero):



Ficha	Espacios
2	0 - 2 - 3 (Cuadro)
1	4 - 7 (Pareja)
1	12 - 15 (Pareja)
1	18 - 21 (Pareja)
1	19 - 22 (Pareja)
2	25 - 28 - 29 - 32 (Cuadro)
1	32 - 35 (Pareja)

**2.Cero**  
(Jeu Cero apuesta):



Ficha	Espacios
1	0 - 3 (Pareja)
1	12 - 15 (Pareja)
1	32 - 35 (Pareja)

**3.Tier**  
(Tercero):



Ficha	Espacios
5	5 - 8 (Pareja)
1	10 - 11 (Pareja)
1	13 - 16 (Pareja)
1	23 - 24 (Pareja)
1	27 - 30 (Pareja)
1	33 - 36 (Pareja)

**4.Orphelins**  
(Orfandad):



Ficha	Espacios
1	1 (Individual)
1	6 - 9 (Pareja)
1	14 - 17 (Pareja)
1	17 - 20 (Pareja)
1	31 - 34 (Pareja)

**5.Vecino:**



Ficha	Espacios
1	1 (Individual)
1	6 - 9 (Pareja)
1	14 - 17 (Pareja)
1	17 - 20 (Pareja)
1	31 - 34 (Pareja)

**outside bets**

En las áreas de apuestas combinación, presione un número y será apoyado junto con 2 números a los ambos lados en una apuesta de 5 piezas

SIGUIENTE PAGINA
SALIR





 
## INSIDE BETS

An Inside bet is based upon betting on any of the numbers within the roulette table (from 0 to 36).

### **Straight up bet (Single Number bet):**

a bet on a single number

**35:1 payout**

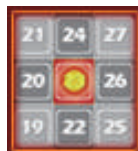

### **Split bet:**

a bet on two adjacent numbers, placed on the line between the 2 numbers. Also can be made between 0 and 1, 0 and 2, or 0 and 3.

**17:1 payout**

 


### **Street bet**

### **(a Three on a Row/Three Number bet):**

a bet on any three numbers in a row on the roulette table.

**11:1 payout**

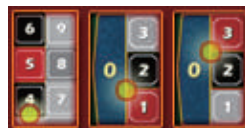

### **Corner**

### **(Square bet / Four Number bet):**

a bet on a block of four numbers on the roulette table.

**8:1 payout**



### **Four Number bet:**

a bet on four numbers, comprising 0, 1, 2 and 3 on the roulette table.

**8:1 payout**



### **Line bet**

### **(Six Number bet/Double street bet):**

a bet on a group of six numbers on the roulette table, which covers two rows of three numbers.

**5:1 payout**



# ROYAL CLUB

## OUTSIDE BETS

An Outside bet is when you choose one of the betting options from outside area of the roulette table – i.e. red, black, 1st 12, EVEN, ODD.

 
### Dozen bet: 2:1 payout

a bet on a group of 12 numbers, placed on the 1st 12 box (numbers 1-12), 2nd 12 box (number 13-24), or 3rd 12 box (number 25-36).



### Column bet: 2:1 payout

1st Column: 1, 4, 7, 10, 13, 16, 19, 22, 25, 28, 31, 34 / 2nd Column: 2, 5, 8, 11, 14, 17, 20, 23, 26, 29, 32, 35 / 3rd Column: 3, 6, 9, 12, 15, 18, 21, 24, 27, 30, 33, 36.



### Low/High Number bet: 1:1 payout

a bet on all low numbers, placed on the low box (number 1-18) / a bet on all high numbers, placed on the high box (number 19-36).



### Even/Odd bet: 1:1 payout

a bet on all even numbers or all odd numbers, placed on the even box (all even numbers) or the odd box (all odd numbers).



### Red/Black bet: 1:1 payout

a bet on all red numbers (1, 3, 5, 7, 9, 12, 14, 16, 18, 19, 21, 23, 25, 27, 30, 32, 34, 36) or on all black numbers (2, 4, 6, 8, 10, 11, 13, 15, 17, 20, 22, 24, 26, 28, 29, 31, 33, 35).





## COMBINATION BETS

To press "CALLBETS" button to approach the Combination Bets Area, and it will provide five combinations of betting.

**ROYAL CLUB**

\*Combinación de Apostas Presionar [ CALL BETS ] y aparece la área de apuestas combinación. Hay cinco combinaciones de apuesta.

**1. Voisins du Zero (Vecino de Cero) :**

Ficha	Espacios
2	0 - 2 - 3 (Cuadro)
1	4 - 7 (Pareja)
1	12 - 15 (Pareja)
1	18 - 21 (Pareja)
1	19 - 22 (Pareja)
2	25 - 28 - 29 (Cuadro)
1	32 - 35 (Pareja)

**2. Cero (Jeu Cero apuesta) :**

Ficha	Espacios
1	0 - 3 (Pareja)
1	12 - 15 (Pareja)
1	26 (Individual)
1	32 - 35 (Pareja)

**3. Tier (Tercero) :**

Ficha	Espacios
1	5 - 8 (Pareja)
1	10 - 11 (Pareja)
1	13 - 16 (Pareja)
1	23 - 24 (Pareja)
1	27 - 30 (Pareja)
1	33 - 36 (Pareja)

**4. Orphelins (Orfandad) :**

Ficha	Espacios
1	1 (Individual)
1	6 - 9 (Pareja)
1	14 - 17 (Pareja)
1	17 - 20 (Pareja)
1	31 - 34 (Pareja)

**5. Vecino :**

Ficha	Espacios
1	En las áreas de apuestas combinación, presione un número y será apoyado junto con 2 números a los ambos lados en una apuesta de 5 piezas

En las áreas de apuestas combinación, presione un número y será apoyado junto con 2 números a los ambos lados en una apuesta de 5 piezas

SEGUIENTE PAGINA SALIR

## Voisins du Zero (Neighbors of Zero)

Chips	Spaces
2	0 - 2 - 3 ( Corner )
1	4 - 7 ( Split )
1	12 - 15 ( Split )
1	18 - 21 ( Split )
1	18 - 22 ( Split )
2	25 - 26 - 28 - 29 ( Corner )
1	32 - 35 ( Split )



### **Zero** (Jeu Zero bet)

Chips	Spaces
1	0 、 3 ( Split )
1	12 、 15 ( Split )
1	26 ( Single )
1	32 、 35 ( Split )

### **Tier** (The Third)

Chips	Spaces
1	5 、 8 ( Split )
1	10 、 11 ( Split )
1	13 、 16 ( Split )
1	23 、 24 ( Split )
1	27 、 30 ( Split )
1	33 、 36 ( Split )

### **Orphelins** (Orphans)

Chips	Spaces
1	1 ( Single )
1	6 、 9 ( Split )
1	14 、 17 ( Split )
1	17 、 20 ( Split )
1	31 、 34 ( Split )

### **Neighbor**

In the Combination Bets Area, to press one number and it will be backed along with the 2 numbers on either side of it in a 5 piece bet.



#### 4.SPIN

After placing bets, to press “SPIN” button or to wait for a second until result comes.

#### 5.BET TIMER

After pressing “SPIN” button, the Bet Timer will count down. Players will have six seconds to place more bets or remove bets until system announces no more bets.

#### 6.UNDO / REDO / CLEAN / REPEAT/ DOUBLE

If you want to undo your most recent action, press the **UNDO** button. To press **REDO** button to redo the previous bet. Press the **CLEAR** button if you want to clear the board of all your chips and place your bets again.

Repeat your previous bet(s) by pressing the **REPEAT** button, and the game will set up your chips to match your previous bet. Please note that all winning stakes automatically stay on the table. Once you have pressed repeat the button will change to **DOUBLE**, which will double the stakes of all the chips on the table.







## SYSTEM SET UP

### ERROR MESSAGE REMOVAL

Please remove the advised messages by following direction:

Messages	Way to Remove the Message
<b>CREDIT LIMIT</b>	REBOOT AND MODIFY THE CREDIT LIMIT RANGE OR PRESS KEYOUT BUTTON .
<b>TICKET EMPTY</b>	PLEASE RESET COMPUTER TO REBOOT AND CLEAR THE ERROR MESSAGE.
<b>HOPPER EMPTY</b>	PLEASE RESET COMPUTER TO REBOOT AND CLEAR THE ERROR MESSAGE.
<b>CCTALK- HOPPER1 ERROR</b>	PLEASE RESET COMPUTER TO REBOOT AND CLEAR THE ERROR MESSAGE.
<b>CCTALK- HOPPER2 ERROR</b>	PLEASE RESET COMPUTER TO REBOOT AND CLEAR THE ERROR MESSAGE.

© Before pressing KEYOUT button to clear the error message, please remember to record the original credit first.

### TEST/SET UP

Press [SETUP] button when power is ON to enter TEST/SETUP screen.  
Please enter the **owner password** to access this page.

SETUP
1.LAST EVENT RECORD 2.IN/OUT SETUP 3.FUNCTION SETUP 4.PASSWORD SETUP 5.RELOAD DEFAULT 6.EVENT RECORD 7.TEST 8.CLEAR ALL EVENTS & STATISTICS
【CALL BETS】:UP 【UNDO】:DOWN 【SPIN】:ENTER 【HELP】:EXIT



## SYSTEM SET UP

### 1.LAST EVENT RECORD

THE LAST TIME TO ...

RELOAD DEFAULT  
CHANGE IN/OUT SETUP  
CHANGE PAYOUT RATE  
CHANGE FUNCTION SETUP  
OPEN FRONT DOOR  
OPEN REAR DOOR  
POWER ON  
CLEAR THE LAST STATISTICS RECORDS  
CLEAR THE STATISTICS RECORDS  
TIME SETUP

【HELP】 : EXIT

### ★2.IN / OUT SET

COIN

COIN RATE : 1000 ~ 500 ~ 200 ~ 100 ~ 50 ~ 20 ~ 10 ~ 5 ~ 2 ~ 1 ~ OFF

KEY IN

NOTE RATE : 10000 ~ 5000 ~ 2000 ~ 1000 ~ 500 ~ 200 ~ 100 ~ 50 ~ 20 ~ 10 ~ 5 ~ 2 ~ 1 ~ OFF

KEY OUT

10000 ~ 5000 ~ 2000 ~ 1000 ~ 500 ~ 200 ~ 100 ~ 50 ~ 20 ~ 10 ~ 5 ~ 2 ~ 1 ~ OFF

PAY OUT

10000 ~ 5000 ~ 2000 ~ 1000 ~ 500 ~ 200 ~ 100 ~ 50 ~ 20 ~ 10 ~ 5 ~ 2 ~ 1 ~ OFF

BILL

10000 ~ 5000 ~ 2000 ~ 1000 ~ 500 ~ 200 ~ 100 ~ 50 ~ 20 ~ 10 ~ 5 ~ 2 ~ 1 ~ OFF

BILL INHIBIT

HIGHT ~ LOW

PAYOUT OPTION

PAY OUT OPTION : TICKET DISPENSOR ~ HOPPER

TOTAL IN METER ADJUSTMENT

1000 ~ 500 ~ 100 ~ 10 ~ 5 ~ 1

TOTAL OUT METER ADJUSTMENT

1000 ~ 500 ~ 100 ~ 10 ~ 5 ~ 1

【CALL BETS】 : UP 【UNDO】 : DOWN 【REDO】 : + 【CLEAN】 : - 【SPIN】 : EXIT

★TO ENTER THE PAGE, A PASSWORD IS REQUIRED.

◎INCORRECT PASSWORD FOR THREE TIMES CONSTANTLY, PLEASE WAIT FOR 30 MINUTES TO ENTER ANOTHER PASSWORD.



## SYSTEM SET UP

### 3.FUNCTION SETUP

#### WIN BET LIMIT

20000、15000、12000、10000、9000、8000、7000、6000、5000、4000、3000、2000、OFF

#### WIN BET

ON、OFF

#### CREDIT LIMIT

1000000、800000、600000、500000、300000、200000、100000、50000、OFF

#### ROUND TIME

90、80、70、60、50、40、30、20、10、OFF/SEC

#### TIME SETUP

2000~2099/1~2/1~30/0~23:1~59

#### VOLUME ADJUSTMENT

0~31

#### GAME RATE

90%~100%

#### MINIMUM BET /Only on the Red/Black, Odd/Even and High/Low betting area.

OFF、0.5、1、5、10、50、100、500

#### STRAIGHT UP MAXBET

500、300、200、100、50

	MAXBET		MAXBET
STRAIGHT UP BET	500、300、200、100、50	DOZEN BET	3500、2100、1400、700、350
SPLIT BET	1000、600、400、200、100	COLUMN BET	3500、2100、1400、700、350
STREET BET	1800、900、600、300、150	RED/BLACK BET	4000、2400、1600、800、400
CORNER	2000、1200、800、400、200	EVEN/ODD BET	4000、2400、1600、800、400
FIVE NUMBER BET	2000、1200、800、400、200	LOW/HIGH NUMBER BET	4000、2400、1600、800、400
LINE BET	3000、1800、1200、600、300		

【CALL BETS】:UP 【UNDO】:DOWN 【REPEAT】:LEFT 【SPIN】:RIGHT

【REDO】:+ 【CLEAN】:- 【SPIN】:EXIT

★TO ENTER THE PAGE, A PASSWORD IS REQUIRED.

◎INCORRECT PASSWORD FOR THREE TIMES CONSTANTLY, PLEASE RESET COMPUTER TO ENTER LOGIN PASSWORD AGAIN.



## SYSTEM SET UP

### 4.PASSWORD SETUP

OWNER PASSWORD:ON/OFF

(On setup page, to use owner's login password or not.)

CHANGE THE OWNER PASSWORD

(On default page, to use employee's login password or not.)

EMPLOYEE PASSWORD:ON/OFF

CHANGE THE EMPLOYEE PASSWORD

**DEFAULT OWNER PASSWORD:0000**

**DEFAULT EMPLOYEE PASSWORD:1111**

【CALL BETS】: UP 【UNDO】: DOWN 【SPIN】:ENTER 【HELP】:EXIT

### 5.RELOAD DEFAVLT

IF YOU WANT RELOAD THE DEFAULT,PLEASE PRESS  FOR 5 SECONDS.

【HELP】: EXIT

### 6.EVENT RECORD

SYSTEM EVENT RECORD

IN/OUT METER EVENT RECORD

WIN EVENT RECORD

【CALL BETS】: LAST PAGE 【UNDO】: NEXT PAGE 【HELP】:EXIT

### 7.TEST

#### BUTTON TEST

PRESS TO CHECK  
IF EACH BUTTON IS  
ON AND MARK ☒

PAYOUT

HELP

CALLBETS

UNDO

KEYIN

CLEAN

PEPEAT/DOUBLE

SPIN

SETUP

DOOR OPEN

KEYOUT

TOUCH CALIBRATION

RECORD

REDO

【HELP】: EXIT

#### SOUND TEST

SOUND TRACK 1

SOUND TRACK 2

SOUND TRACK 3

SOUND TRACK 4

【CALL BETS】: LAST PAGE 【UNDO】: NEXT PAGE 【HELP】:EXIT





## SYSTEM SET UP

### 8.CASH IN/OUT DEVICE TEST

GENERAL	
IN	
COIN ACCEPTOR	
BILL ACCEPTOR	
KEY IN	
KEY OUT	
OUT	
HOPPER	TEST
PRINTER	TEST

CCTALK	
IN	
COIN ACCEPTOR 0.5 €	
COIN ACCEPTOR 1.0 €	
COIN ACCEPTOR 2.0 €	
OUT	
HOPPER1	TEST
HOPPER2	TEST

【CALL BETS】: LAST PAGE 【UNDO】: NEXT PAGE 【HELP】:EXIT

### Functional Testing of Touch-screen Panel

- 1.To press [TOUCH SCREEN CALIBRATE SWITCH] button for 3 seconds.
- 2.To press the four corner circles precisely.  
(The more precise you press the four corners, the more accurate it will be. )
- 3.To press [HELP] button to move off.



## STATISTICS

Press the [RECORD] button when the power is ON to enter RECORD screen.  
Please enter the **employee password** to access this page.

### STATISTICS 1

ESTADÍSTICA 1					
ESTADÍSTICA TOTAL			ESTADÍSTICA ACTUAL		
CREDITO TOTAL					
PAGO TOTAL					
GANANCIA					
MONEDA		NÚMERO			NÚMERO
BILLETE		NÚMERO			NÚMERO
CÉDULOS POR LLAVE					
PAGOS POR LLAVE					
PAGOS		NÚMERO			NÚMERO
VECES JUGADAS					
PORCENTAJE DE GANANCIA		%			%

CALL BETS (LAST PAGE)

UNDO (NEXT PAGE)

CLEAN (CLEAN THE LAST STATISTICS)

HELP (EXIT)

### STATISTICS 2

ESTADÍSTICA 2					
NÚMERO	PUNTOS	PORCENTAJE	NÚMERO	PUNTOS	PORCENTAJE DEL NÚMERO MOSTRADO
0		%	19		%
1		%	20		%
2		%	21		%
3		%	22		%
4		%	23		%
5		%	24		%
6		%	25		%
7		%	26		%
8		%	27		%
9		%	28		%
10		%	29		%
11		%	30		%
12		%	31		%
13		%	32		%
14		%	33		%
15		%	34		%
16		%	35		%
17		%	36		%
18		%			

ÚLTIMA PÁGINA  
CALL BETS

PÁGINA SIGUIENTE  
DESMACER

SALIR  
AYUDAR

CALL BETS (LAST PAGE)

UNDO (NEXT PAGE)

HELP (EXIT)



## STATISTICS

### STATISTICS 3

ESTADÍSTICA 3		
NÚMERO	PUNTOS	PORCENTAJE DEL NÚMERO MOSTRADO
ROJO		0% /0
NEGRO		0% /0
0		0% /0
NÚMERO	PUNTOS	PORCENTAJE DEL NÚMERO MOSTRADO
1 a 18		0% /0
19 a 36		0% /0
0		0% /0
NÚMERO	PUNTOS	PORCENTAJE DEL NÚMERO MOSTRADO
ROULETTE		0% /0

CALL BETS (LAST PAGE)

UNDO (NEXT PAGE)

HELP (EXIT)



## WIRING DIAGRAM

COMPONENT SIDE	36PIN	SOLDER SIDE
GND	1	GND
AUDIO OUT L(+)	2	SPEAKER (-)
AUDIO OUT R(+)	3	SPEAKER (-)
[CALL BETS] SWITCH	4	
[UNDO] SWITCH	5	
[REDO] SWITCH	6	
[CLEAN] SWITCH	7	
HOPPER FULL SENSOR	8	
[SPIN] SWITCH	9	
[REPEAT] SWITCH	10	
TOUCH SCREEN CALIBRATE SWITCH	11	
	12	
[HELP] SWITCH	13	
	14	
	15	
BACK DOOR SWITCH	16	
FRONT DOOR SWITCH	17	REMOTE CONTROL
COIN IN SWITCH	18	KEY IN SWITCH
	19	BILL ACCEPTER
ACCOUNT SWITCH	20	SET UP SWITCH
[PAY OUT] SWITCH	21	KEY OUT SWITCH
	22	HOPPER SWITCH
	23	BILL INHIBIT
	24	DIVERT
TOTAL OUT	25	ERROR LAMP
TOTAL IN	26	TOTAL IN COUNTER
	27	
	28	
[SPIN] LAMP	29	[CALL BETS] LAMP
[REPEAT] LAMP	30	[UNDO] LAMP
[PAY OUT] LAMP	31	[REDO] LAMP
	32	[CLEAN] LAMP
[HELP] LAMP	33	
HOPPER SSR	34	
N.C.	35	N.C.
GND	36	GND





## WIRING DIAGRAM

 
COMPONENT SIDE	10PIN	SOLDER SIDE
GND	1	GND
GND	2	GND
+5V	3	+5V
+5V	4	+5V
+12V	5	+12V
+24V for CC-TALK POWER	6	+24V for CC-TALK POWER
HOPPER SSR	7	HOPPER SSR
N.C.	8	N.C
GND	9	GND
GND	10	GND

## CONTROL PANEL





## PCB CONNECTOR PIN DIAGRAM


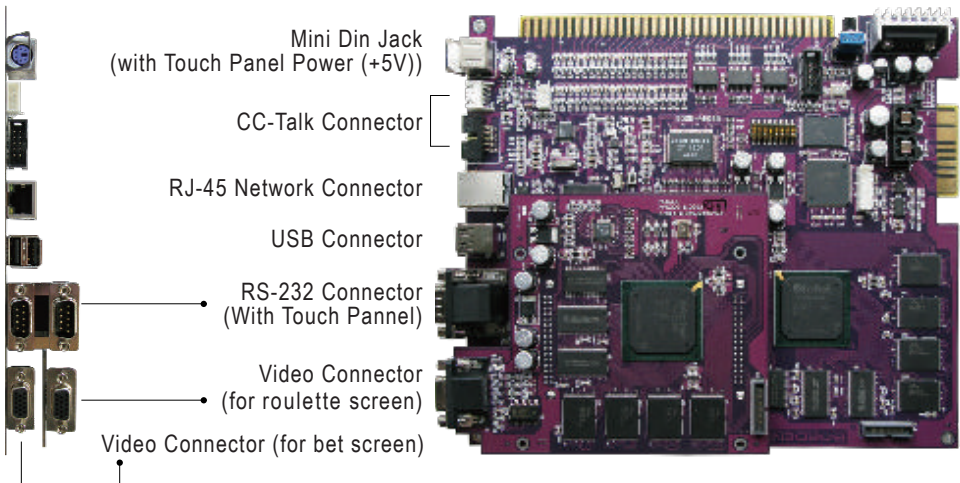


### NOTE



## CC-TALK CONNECTOR PIN DIAGRAM

  Connector mode : male

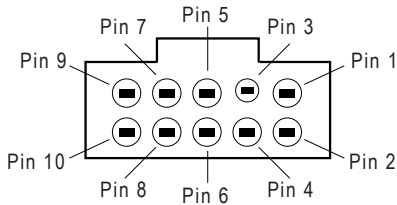

Pin 1	+12 V
Pin 2	N.C.
Pin 3	GND
Pin 4	Date

Pin 1	Date
Pin 2	N.C.
Pin 3	N.C.
Pin 4	N.C.
Pin 5	N.C.
Pin 6	N.C.
Pin 7	+ 24 V
Pin 8	GND
Pin 9	N.C.
Pin 10	N.C.

★ N.C. : No Connection

### NOTE



Display mode : XVGA  
Resolution : 1024X768  
Formats : 4:3  
Vertical Scan Freq. : 60Hz  
Horizontal Scan Freq. : 48kHz

**BORDEN**  
TECHNOLOGY CORPORATION

Game development and manufacturing

No.2, Lane 55, Wan shing St.,Kaohsiung 807, TAIWAN.R.O.C

T E L : +886-7-3852311 · FAX:+886-7-3836639

E - mail : [sales@borden.com.tw](mailto:sales@borden.com.tw)

Web Site : [www.borden.com.tw](http://www.borden.com.tw)